


Product Code: 570/30835

Getting started

Thank you for purchasing this product. Please read the instructions and check pack contents carefully before starting assembly of this product. A full checklist of components is given in this leaflet. If any components

are missing please contact John Lewis and partners customer services. This product will take 2 people approximately 60 minutes to assemble.

Tools required

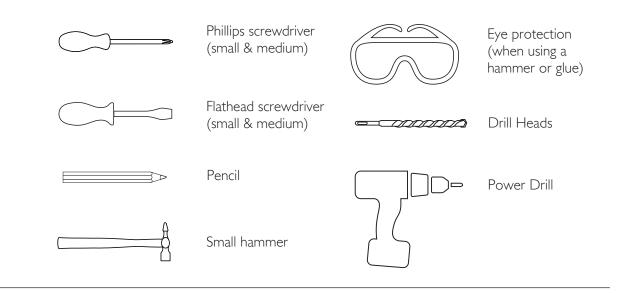

Important safety information

The product should only be used on firm, level ground.

Keep small parts out of reach of children.

Ensure the product is fully assembled as illustrated before use.

Do's

Check the pack and make sure you have all the parts listed. Check all the screws or bolts are tightened and inspect regularly.

Don'ts

Do not over tighten screws or bolts.

Do not stand on the product.


Do not use power tools to construct as overtightening and panel failure may occur. Don't over-screw the wooden board.




Warning:

In order to prevent overturning, this product must be used with the wall attachment device provided!


Fittings and parts

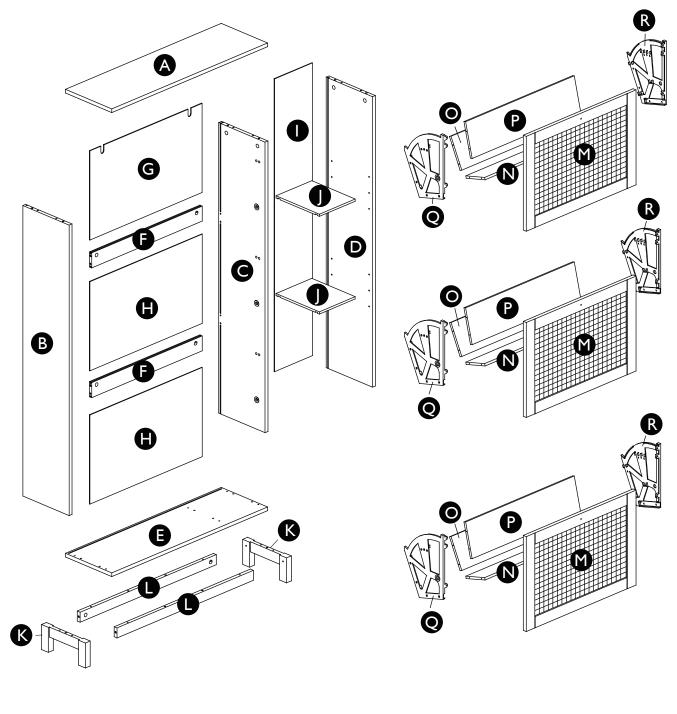


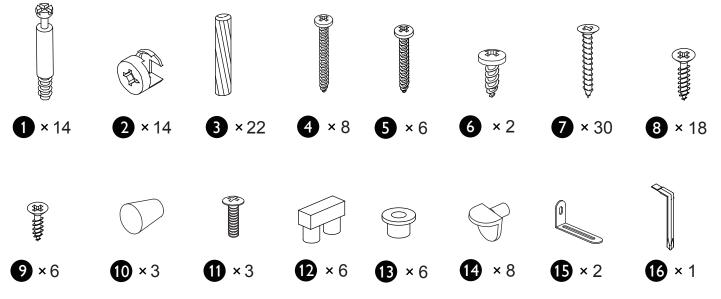



Fittings and parts checklist


Ref	Description	Qty	Ref	Description	Qty
•	Top panel	1	0	Metal dowel	14
B	Left side panel	1	2	Locking nut	14
O	Divider panel	1	3	Dowel	22
D	Right side panel	1	4	Screw	8
B	Bottom panel	1	6	Screw	6
G	Back rail	2	6	Screw	2
G	Left upper back panel	1	7	Screw	30
	Left under back panel	2	8	Screw	18
0	Right back panel	1	9	Screw	6
0	Adjustable panel	2	10	Knob	3
K	Leg	2	0	Bolt	3
0	Under rail	2	Ð	Plastic fitting	6
	Front panel	3	B	Plastic joiner	6
	Bottom fixed panel	3	L	Metal support	8
0	Back fixed panel	3	ß	Wall bracket	2
P	Internal adjustable panel	3	16	Allen Wrench	1
0	Left plastic panel	3			
R	Right plastic panel	3			

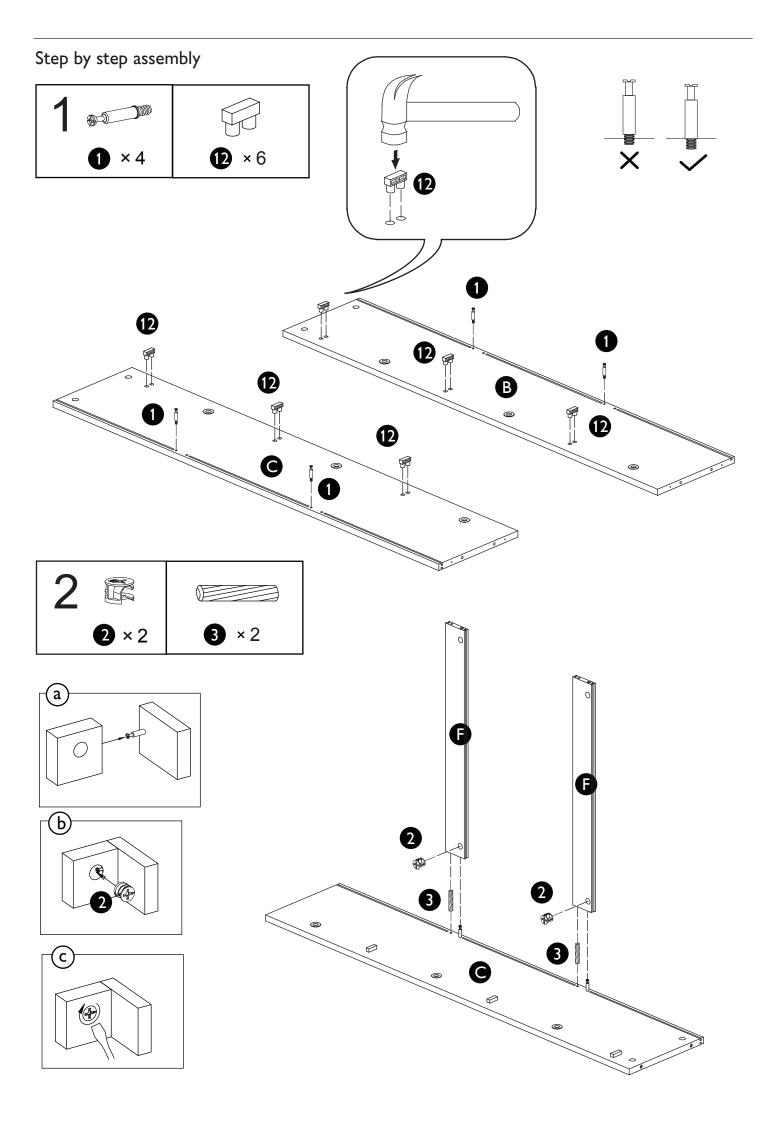


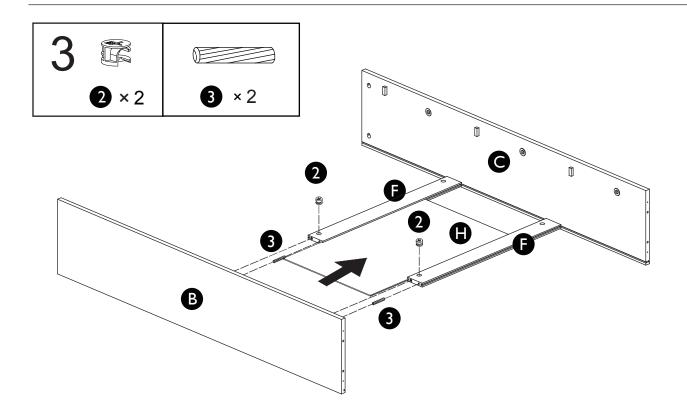


 


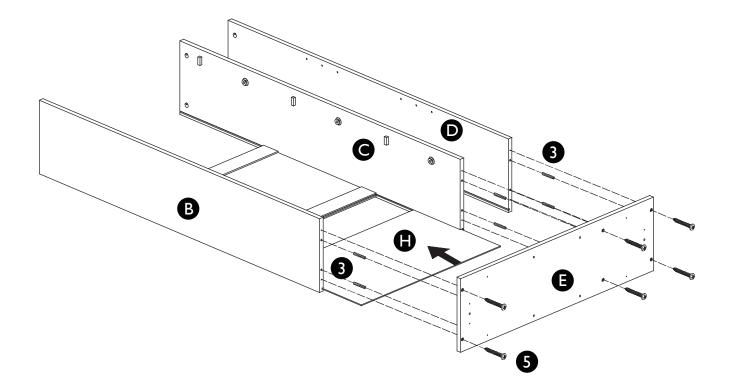


 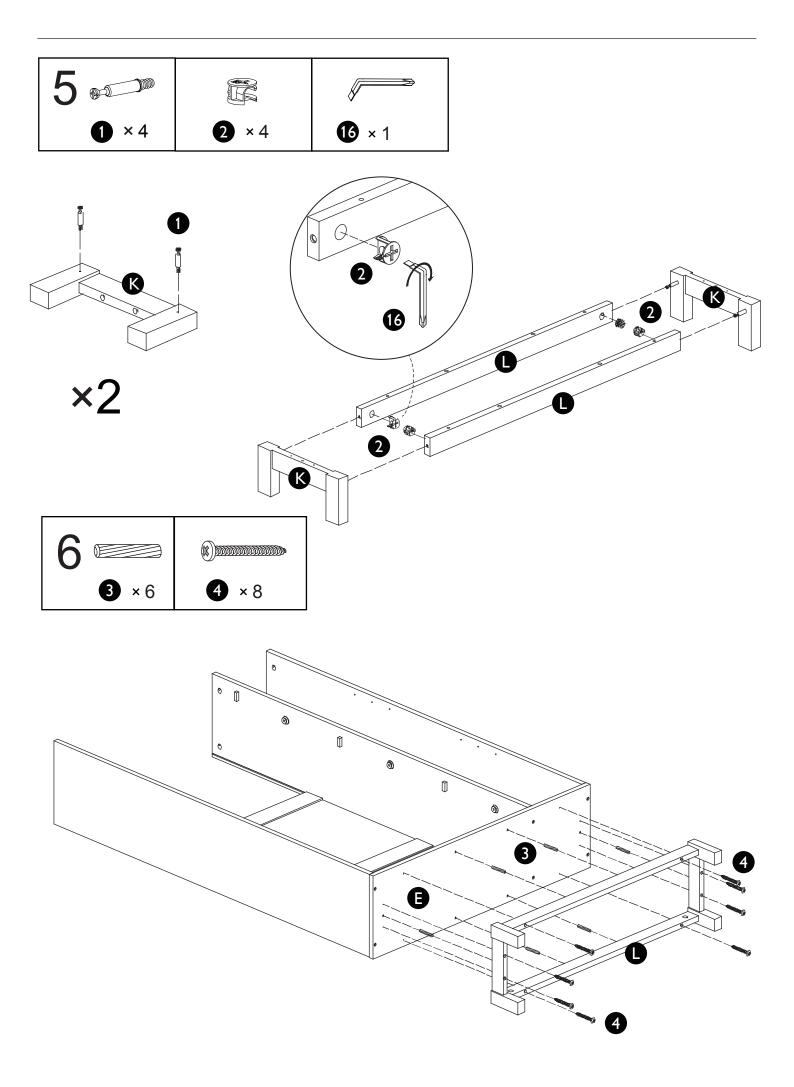

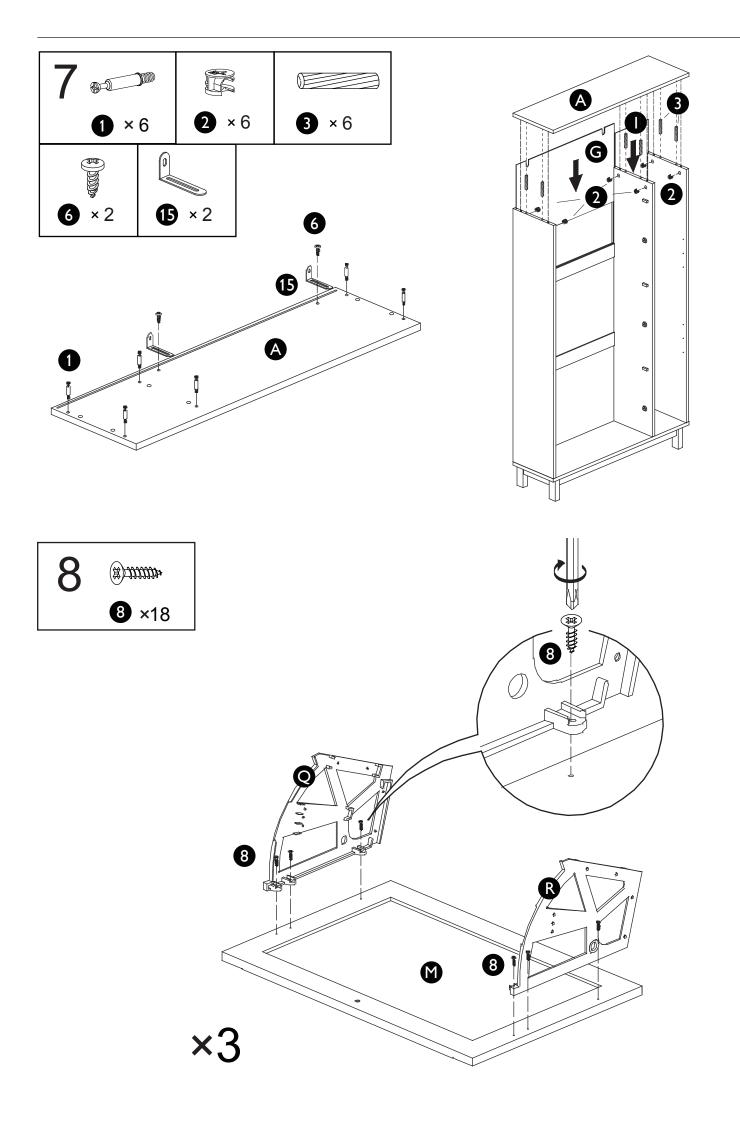


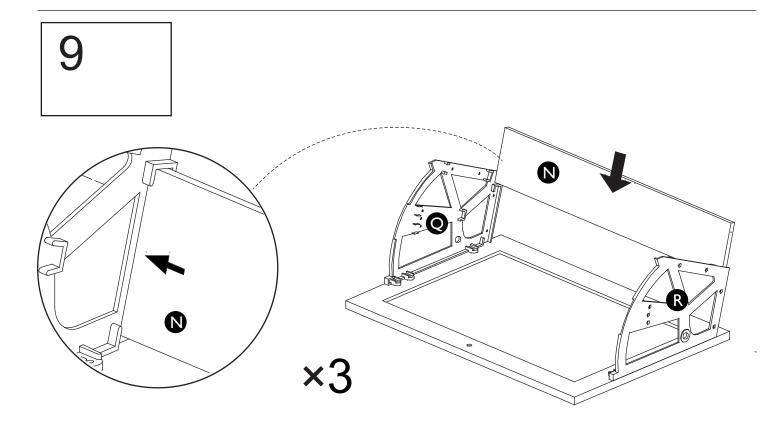





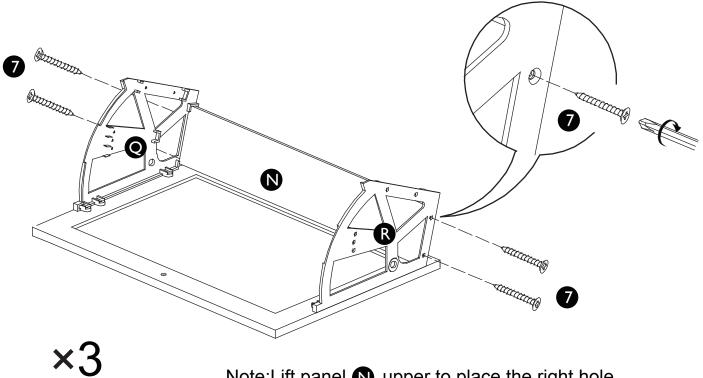



Note:Lift panel **N** upper to place the right hole.

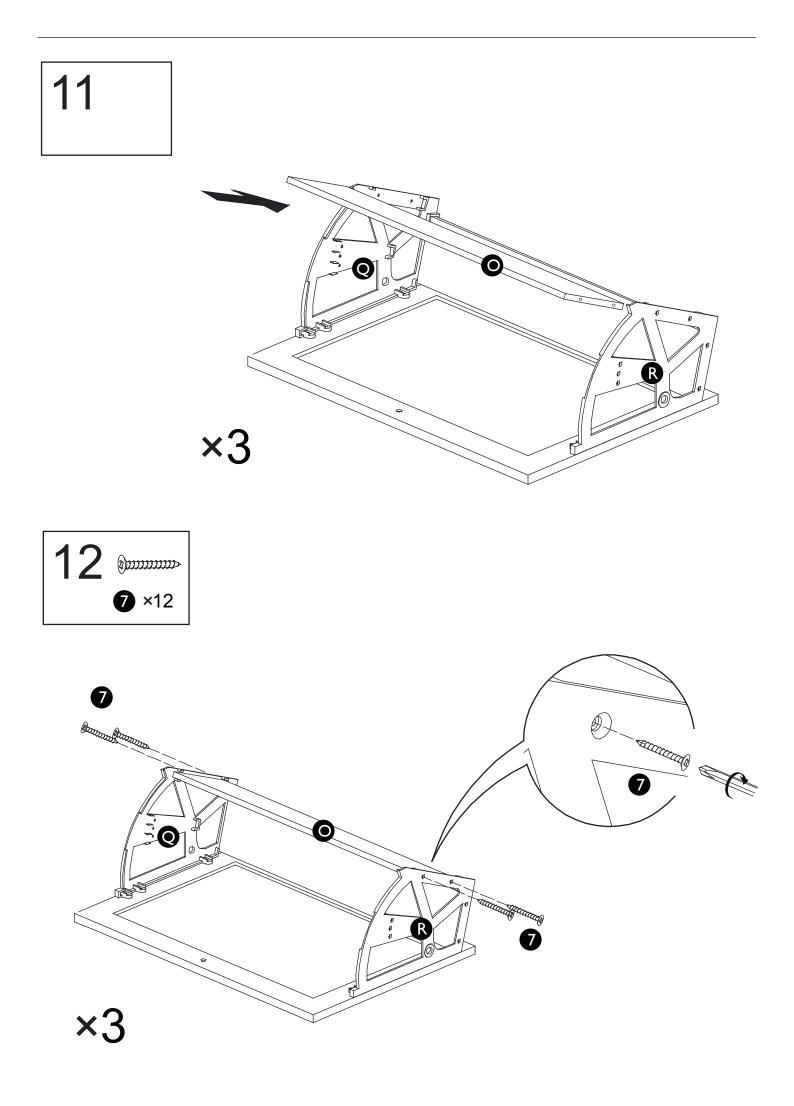

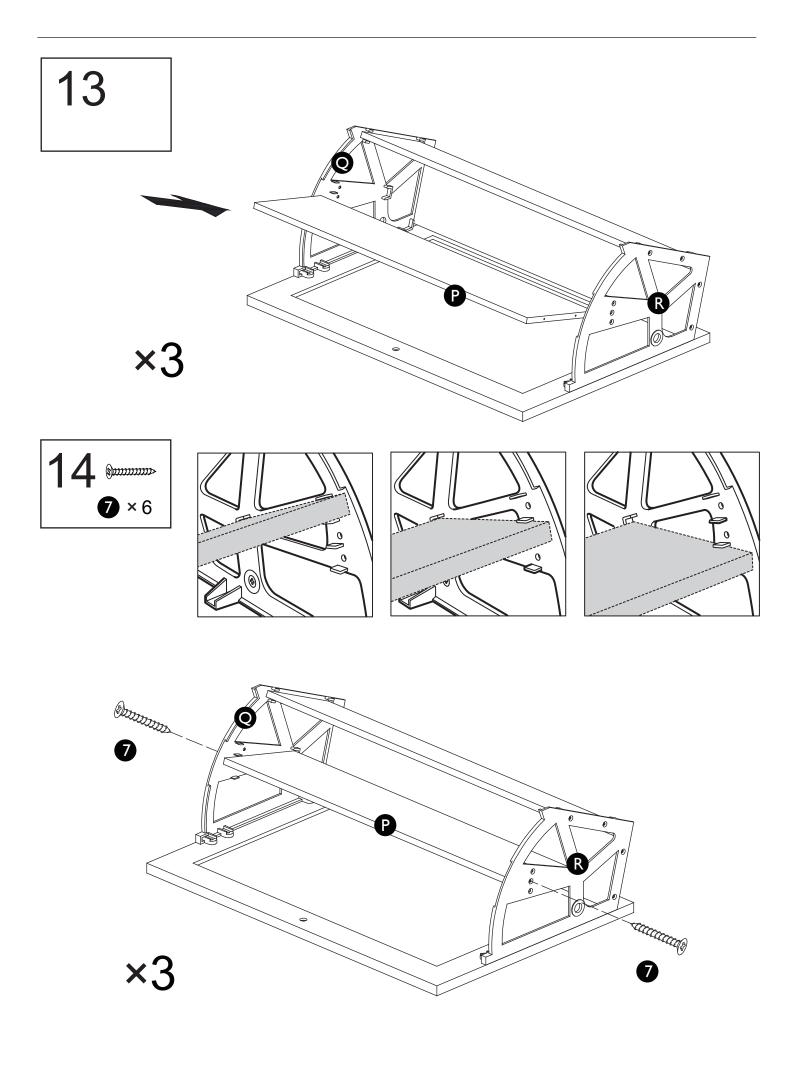


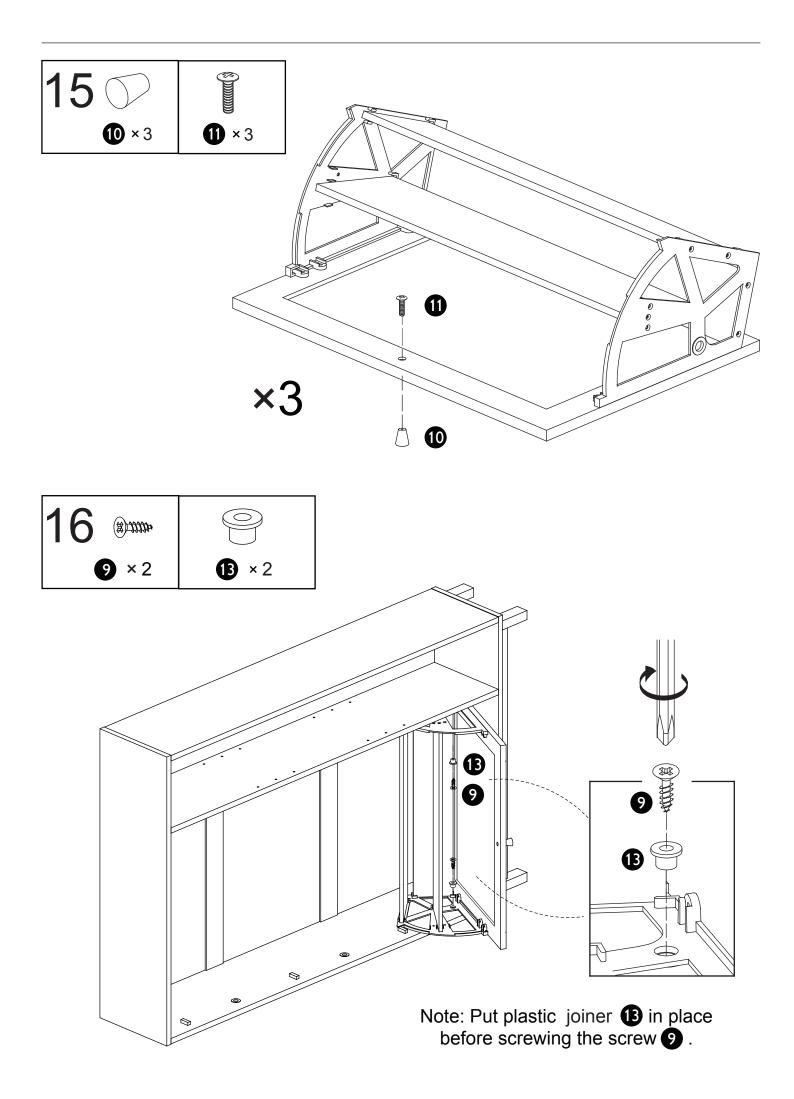

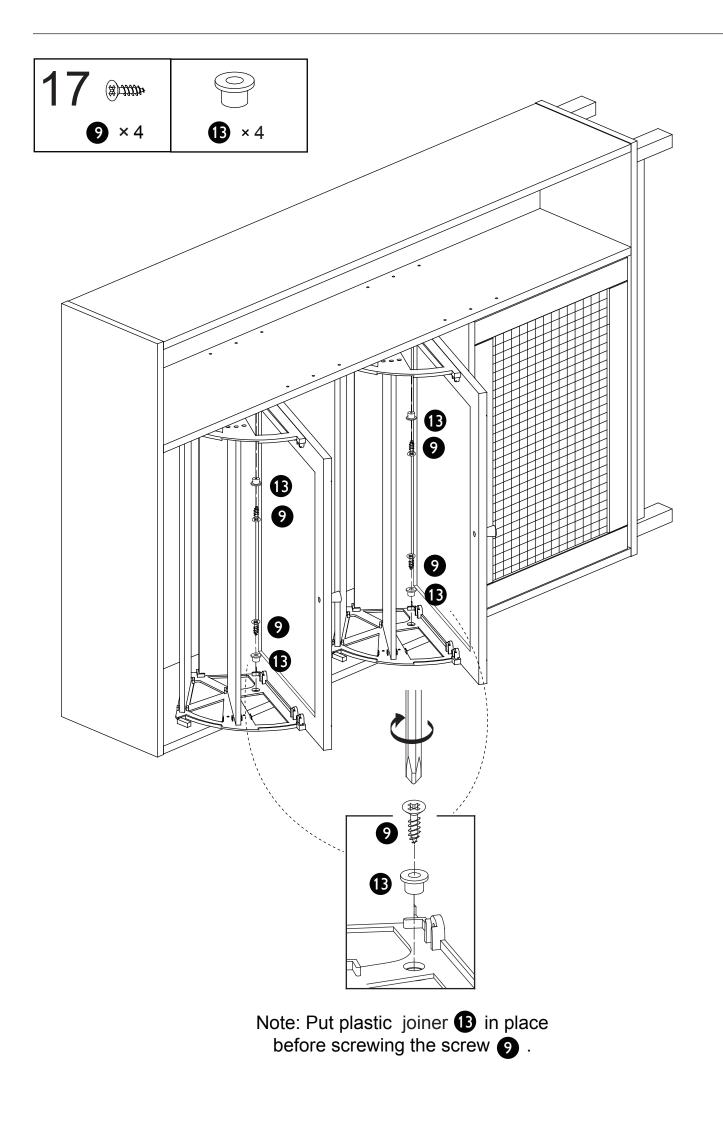

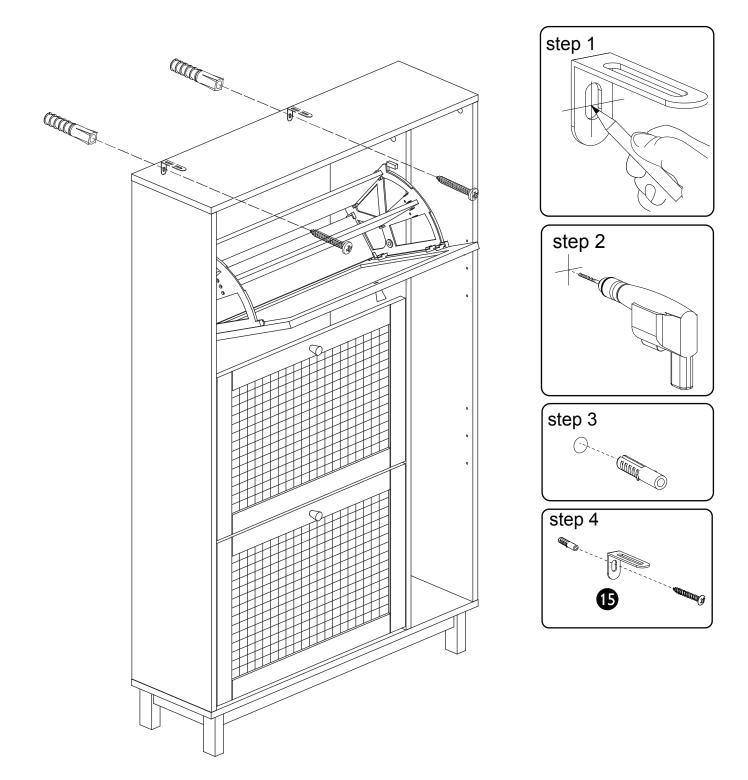



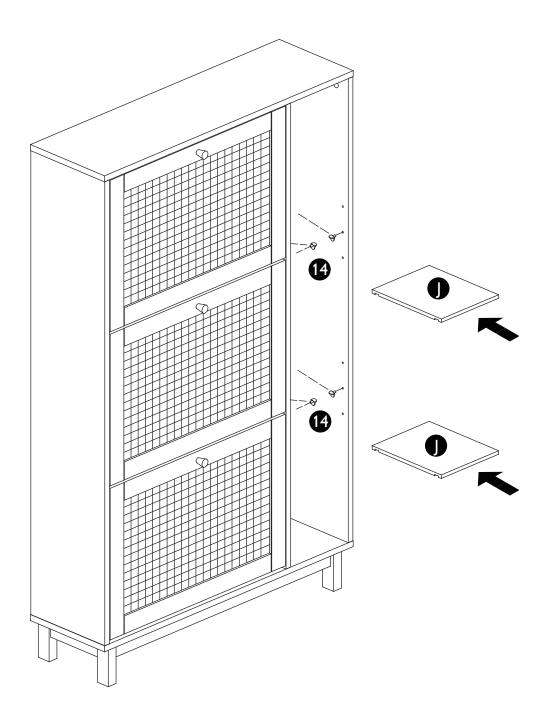

GUIDE TO WALL MOUNTING & FIXINGS

 
KEY INFORMATION

▲ Warning: Although we have provided fixings, different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure. Failure of the product due to incorrect fixings is the responsibility of the installer.

Important - When drilling into the walls always check that there are no hidden wires or pipes etc.


Take care when drilling on glazed tile surfaces in case the drill slips.

FIXINGS You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.




General Purpose wall plug

 Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general – purpose wall plugs can be used.




Plasterboard wall plug

 For use when attaching light loads on to plasterboard partitions.




Cavity Fixing wall plug

 For use with plasterboard partitions or hollow wooden doors.




Cavity Fixing – Heavy Duty wall plug

 For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.



Hammer Fixing wall plug

 For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.



Shield Anchor wall plug – Heavy loads

For use with heavier loads such as TV and Hi-Fi speakers and satellite dishes etc.

John Lewis Plc 171 Victoria Street London SW1E 5NN johnlewis.com

Made in China